

# CYBEART

JOIN THE REVOLUTION


## AKULA65 *LITE*



**65% COMPACT LAYOUT**

USER MANUAL

# Keyboard Function Description

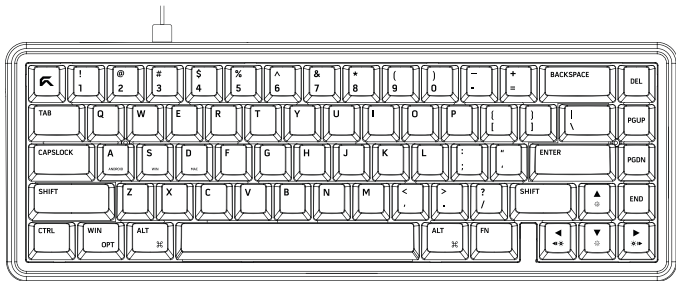

Modern, sleek and stylish design, 67 key Layout, Gasket-mounted structure, Premium and soft touch

The keycaps and mechanical switches are hot-swappable, allowing users to freely customize their setup with various switch brands and personalized keycaps available on the market.

## Wired Mechanical Keyboard

Equipped with a Fn key the keyboard provides with a series of commonly used shortcut functions.

Keyboard Return rate : Wired mode - 125Hz

Wired mode support full key rollover with no input lag

## Specifications

- Number of keys: 67 keys
- Product size: 325.09×115.62×43.81±0.10mm
- Product weight: 877g
- Rated voltage: DC 5V
- Operating system: Win XP/7/8/10, MAC/Android

# Standard Version Shortcut Key Description

| FN+                | ESC                         | CTRL-L                          | ▲                          | ▼                      |
|--------------------|-----------------------------|---------------------------------|----------------------------|------------------------|
| Combined Functions | Reset to factory setting    | Switch between number & F area  | Backlight brightness +     | Backlight brightness - |
| FN+                | U                           | I                               | O                          | DEL                    |
| Combined Functions | PRTSC                       | SCRLK                           | PAUSE                      | INS                    |
| FN+                | END                         | \                               | ◀                          | ▶                      |
| Combined Functions | HOME                        | Switching backlight mode        | Backlight speed -          | Backlight speed +      |
| FN+                | R-Shift                     | ,<                              | .>                         | PGUP                   |
| Combined Functions | Switching side light effect | Switching side light brightness | Switching side light speed | `                      |
| FN+                | PGDN                        | ?/                              | WIN-L                      |                        |
| Combined Functions | ~                           | Switching side light color      | Lock WIN                   |                        |

# Standard Version Shortcut Key Description

- Press FN+ESC (hold 3s) to restore the factory default lighting mode.
- In the default factory settings, the keys '1' to '+' + Fn = F1 to F12

|                |    |     |     |     |    |    |    |    |
|----------------|----|-----|-----|-----|----|----|----|----|
| Key            | 1  | 2   | 3   | 4   | 5  | 6  | 7  | 8  |
| Single press   | 1  | 2   | 3   | 4   | 5  | 6  | 7  | 8  |
| Fn Combination | F1 | F2  | F3  | F4  | F5 | F6 | F7 | F8 |
| Key            | 9  | 0   | =   | =+  |    |    |    |    |
| Single press   | 9  | 0   | =   | =+  |    |    |    |    |
| Fn Combination | F9 | F10 | F11 | F12 |    |    |    |    |

- Press FN+left CTRL, the left CTRL red light is on, and the F area function and the number function are swapped.

|                |    |     |     |     |    |    |    |    |
|----------------|----|-----|-----|-----|----|----|----|----|
| Key            | 1  | 2   | 3   | 4   | 5  | 6  | 7  | 8  |
| Single press   | F1 | F2  | F3  | F4  | F5 | F6 | F7 | F8 |
| Fn Combination | 1  | 2   | 3   | 4   | 5  | 6  | 7  | 8  |
| Key            | 9  | 0   | =   | =+  |    |    |    |    |
| Single press   | 9  | 0   | =   | =+  |    |    |    |    |
| Fn Combination | F9 | F10 | F11 | F12 |    |    |    |    |

# Standard Version Shortcut Key Description

## Android System

| KEY          | F1                  | F2                  | F3             | F4             | F5           | F6           |
|--------------|---------------------|---------------------|----------------|----------------|--------------|--------------|
| Single Press | Screen Brightness - | Screen Brightness + | Convert Window | Return to Desk | Brightness - | Brightness + |
| Fn+          | F1                  | F2                  | F3             | F4             | F5           | F6           |

| KEY          | F7            | F8         | F9        | F10  | F11      | F12      |
|--------------|---------------|------------|-----------|------|----------|----------|
| Single Press | Previous Song | Play/Pause | Next Song | Mute | Volume - | Volume + |
| Fn+          | F7            | F8         | F9        | F10  | F11      | F12      |

## Windows System

| KEY          | F1   | F2   | F3             | F4            | F5           | F6           |
|--------------|------|------|----------------|---------------|--------------|--------------|
| Single Press | Home | Mail | Convert Window | Open Explorer | Brightness - | Brightness + |
| Fn+          | F1   | F2   | F3             | F4            | F5           | F6           |

| KEY          | F7            | F8         | F9        | F10  | F11      | F12      |
|--------------|---------------|------------|-----------|------|----------|----------|
| Single Press | Previous Song | Play/Pause | Next Song | Mute | Volume - | Volume + |
| Fn+          | F7            | F8         | F9        | F10  | F11      | F12      |

# Standard Version Shortcut Key Description

## Mac System

| KEY          | F1                  | F2                  | F3             | F4             | F5           | F6           |
|--------------|---------------------|---------------------|----------------|----------------|--------------|--------------|
| Single Press | Screen Brightness - | Screen Brightness + | Convert Window | Return to Desk | Brightness - | Brightness + |
| Fn+          | F1                  | F2                  | F3             | F4             | F5           | F6           |

| KEY          | F7            | F8         | F9        | F10  | F11      | F12      |
|--------------|---------------|------------|-----------|------|----------|----------|
| Single Press | Previous Song | Play/Pause | Next Song | Mute | Volume - | Volume + |
| Fn+          | F7            | F8         | F9        | F10  | F11      | F12      |



[cybeart.com](https://cybeart.com)