

USER MANUAL


Upload the photo of your setup with our product and tag us on social media platforms [@cybe_art](#) to get featured on our website's [#CYBEARTSQUAD](#) section and our social media.



Press and hold the lever on the outside of the armrest to make the height adjustment.



Carefully pull the lever and lean back until you've reached your desired angle and release the lever to its original position.

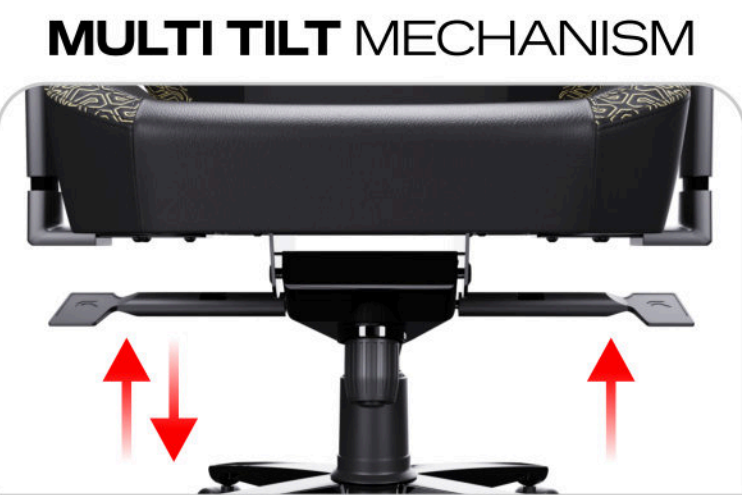

Use the right lever for height adjustment and left lever for tilting the chair. Push up to unlock and down to lock the tile mechanism.



Move the armrest forward, backward, left, right and angle swivel to adjust as per your convenience.



Loosen the M8 screws at the bottom of the armrest to increase or increase the distance between the two armrest. Adjust as per your convenience and tighten them back.



Turn the knob clockwise to loosen and anti-clockwise to tighten the tilt tension of the chair.

NEO

ASSEMBLY GUIDE AND USER MANUAL

cs@cybeart.com / cs@cybeart.in / cs@cybeartmea.com

ASSEMBLY

ASSEMBLING YOUR THRONE IS JUST A SCAN AWAY!

Scan the QR Code on the right and watch the video on the step-by-step process of the assembly.



If you face any problems with the product, please **DO NOT** return it to your retailer. Contact us for further assistance at our email cs@cybeart.com or visit our website at cybeart.com and contact us via chat support.

*Emails are different as per region -
cs@cybeart.com / cs@cybeart.in / cs@cybeartmea.com

STEP 1

Take the foam sheet and lay it on the ground.
Use the foam sheet as a base to assemble the chair. That will avoid any scratches to the chair.



STEP 2

Place the wheelbase upside down and carefully insert the 5 wheels (found in the accessories box).



STEP 3

Turn the wheel base and place gas lift piston in the middle.
Slide the cover on top of it.



STEP 4

Attach both the 4D Armrest handles to the bottom of seat with 4 M8 screws.



STEP 5

Now put the seat on the foam.
Attach the recline mechanism to both sides of the seat using the screws provided.
Carefully place the backrest on the seat. Align the screw holes in the back rest with the holes in the recline mechanism



STEP 6

Insert the M8 screws first on the side with recline mechanism and then on the other side.



STEP 7

Attach the both the side covers with M5 screws. Do not over tighten the screws.



STEP 8

Now lift the chair and gently set it facing downwards.



STEP 9

Attach the multi-functional mechanism to the bottom of seat with 4 M8 screws.
Make sure that the tilt tension knob is facing the front side of the chair.



STEP 10

Align the grooves of the lever handles with the notches and insert firmly. Make sure to insert them horizontally facing front side of the chair.



STEP 11

Grab the assembled wheel base and insert the gas lift piston into the socket of the multi-functional mechanism.



STEP 12

Hold the wheelbase from the bottom and the back- rest and carefully place the chair in the upright position.



VOILA! YOUR CYBEART CHAIR IS READY TO USE.